

- Intended for adult use only. Keep out of reach of children and pets.
 - For hygiene reasons, we do not recommend sharing sex toys.
 - Stop use immediately if you experience pain, discomfort, or irritation.
 - Recommended for use with water-based lubricants.
 - Use only the charging cable provided or a compatible certified cable.
 - Read and follow all instructions provided with the product prior to first use.
-

How do I turn the Peachy Toys on?

Charge your Peachy toy for 1.5 hours to reach full charge (you'll know it's charged when the light stops flashing).

Press and hold the power button for at least 3 seconds to turn on.

Then play around with the vibration levels and patterns by short pressing the power button to cycle through and find the perfect pleasure setting for you.

Press and hold power button for 3 seconds to turn your Peachy toy off.

How do I keep my Peachy toys clean?

Always clean your toy thoroughly before and after each use with clean warm water and soap. Rinse and pat dry with a lint-free towel or cloth.

Always store toy in a soft storage bag, to avoid dust build up or damage from other materials, and to keep it safe from sunlight or other extreme heats.
