



Premium Rechargeable Automatic LCD Pump

Product Information

Item number	PMP014TRA
EAN code	8714273924452
Brand name	Pumped by Shots

Instructions for use

Thank you for choosing the Premium Rechargeable Automatic LCD Pump. Please follow these instructions to ensure optimal performance and longevity of your pump.

Components

1. LCD Display: Shows the battery level and operational status.
2. Rechargeable Battery: Powers the pump for cordless convenience.
3. Power Button: Turns the pump on and off.
4. Charging Port: Connects to the charging cable for recharging the battery.
5. Nozzle: Attaches to the liquid source.

Before First Use

1. Charging the Pump:
 - Ensure the pump is fully charged before first use.
 - Connect the charging cable to the charging port and plug it into a power outlet.
 - The LCD display will show the charging status. Once fully charged, unplug the pump.
2. Attaching the Nozzle:
 - Carefully attach the nozzle to the pump, ensuring a secure fit.

Operating Instructions

1. Turning On the Pump:
 - Press the power button to turn on the pump. The LCD display will illuminate, indicating the pump is ready for use.
2. Using the Pump:
 - Position the nozzle securely into the liquid source.
 - The pump will automatically start drawing the liquid once the nozzle is in place.
3. Monitoring Operation:
 - Keep an eye on the LCD display for battery level and operational status during use.
4. Turning Off the Pump:
 - Once you have dispensed the desired amount of liquid, press the power button to turn off the pump.

Maintenance and Care

1. Cleaning the Nozzle:
 - After each use, detach the nozzle and rinse it thoroughly with clean water to prevent clogging.
2. Storing the Pump:
 - Store the pump in a dry, cool place. Avoid direct sunlight and extreme temperatures.
3. Recharging the Battery:
 - Recharge the battery when the LCD display indicates a low battery level. Follow the charging instructions outlined above.

Safety Precautions

- Do not immerse the pump in water or any other liquid.
- Use the pump only for its intended purpose.
- Keep out of reach of children.

For any further assistance or inquiries, please refer to the warranty and support information provided with your purchase. Enjoy the convenience of your Premium Rechargeable Automatic LCD Pump!



Shots BV

Veesteeg 12
6658KP Beneden-leeuwen
The Netherlands

customerservice@shots.nl



Washing instructions

To ensure the longevity and optimal performance of your Premium Rechargeable Automatic LCD Pump, please follow these cleaning instructions:

1. Power Off: Before cleaning, ensure that the pump is turned off and disconnected from any power source.
2. Disassemble: Carefully detach any removable parts, such as the dispensing nozzle and water reservoir, according to the user manual.
3. Rinse: Rinse all removable components under warm running water to remove any residue. Avoid using hot water, as it may damage the parts.
4. Clean: Use a mild dish soap and a soft cloth or sponge to gently clean the exterior and interior surfaces of the pump. Avoid abrasive cleaners or scrubbers that could scratch the surface.
5. Dry: After washing, thoroughly dry all components with a clean, dry cloth. Ensure that no moisture remains in the pump or its parts to prevent mold or mildew growth.
6. Reassemble: Once all components are completely dry, reassemble the pump carefully, ensuring that all parts fit securely.
7. Storage: Store the pump in a cool, dry place when not in use.

By following these instructions, you can keep your Premium Rechargeable Automatic LCD Pump clean and functioning effectively.

Ingredients

-

Warnings

1. Electrical Hazard: This product is powered by electricity. Ensure that the device is not used near water or wet surfaces to prevent electric shock. Always disconnect from the power source when not in use or during maintenance.
2. Battery Caution: The rechargeable battery must be handled with care. Do not attempt to disassemble, puncture, or expose the battery to extreme temperatures. Charging should only be done with the provided charger. Failure to do so may result in battery damage, fire, or explosion.
3. Pressure Risk: The pump operates under pressure. Avoid placing hands or body parts near the outlet during operation. Ensure that the pump is securely positioned to prevent accidental tipping or spills.
4. User Supervision: This product should be used with adult supervision. Keep out of reach of children to prevent accidents or injuries.
5. Material Compatibility: Ensure that the pump is used only with compatible liquids. Using it with corrosive, flammable, or hazardous materials can cause damage to the pump and pose serious safety risks.
6. Regular Maintenance: Regularly inspect the pump for any signs of wear or damage. Do not operate if any components are damaged or malfunctioning.
7. Emergency Shutdown: In case of any malfunction, immediately disconnect the pump from the power source. Do not attempt to repair the device unless you are a qualified technician.

By following these warnings, you can help ensure safe and effective use of the Premium Rechargeable Automatic LCD Pump.

Disposal instructions

Thank you for choosing the Premium Rechargeable Automatic LCD Pump. To ensure proper disposal and minimize environmental impact, please follow these guidelines:

1. Battery Disposal: This product contains a rechargeable battery. When the pump reaches the end of its life, please remove the battery (if possible) and dispose of it at a designated battery recycling facility. Do not dispose of batteries in regular household waste.
2. Product Disposal: For the remaining components of the pump, please follow your local regulations regarding electronic waste disposal. Many communities have designated drop-off locations for electronic items, or you may find recycling programs that accept small appliances.

3. Recycling: If your pump is no longer functioning, consider recycling it instead of throwing it away. Check with local recycling centers to see if they accept small electronics or appliances.

4. Packaging: Please recycle any packaging materials, such as cardboard and plastic, according to your local recycling guidelines.

By following these disposal instructions, you are helping to protect the environment and promote sustainable practices. Thank you for your cooperation!

DISCLAIMER: All products purchased from Shots prior to December 13, 2024, remain marketable as they are governed by the provisions of the previous legislation.