



## May - Dual Pulse-Wave & Vibrating C-spot & G-Spot Rabbit - Purple

### Product Information

Item number	VIVE045PUR
EAN code	7423522624616
Brand name	VIVE by Shots



### Instructions for use

#### Product Overview

The "May - Dual Pulse-Wave & Vibrating C-spot & G-Spot Rabbit - Purple" is a versatile and elegantly designed personal massager. It features dual functionalities for targeted stimulation of both the C-spot and G-spot, offering a unique pulse-wave and vibrating experience. Enjoy the luxurious design and powerful sensations tailored for your satisfaction.

#### Charging the Device

1. Locate the Charging Port: The charging port is situated on the handle of the device. Insert the provided USB charging cable into the port.
2. Connect to Power Source: Plug the USB end of the charging cable into a power adapter or USB port on your computer. Ensure the device is charging by checking for an indicator light.
3. Charge Fully: Allow the device to charge completely before first use. A full charge ensures optimal performance.

#### Using the Device

1. Power On: Press and hold the power button located on the handle until the device vibrates or pulses, indicating it is turned on.
2. Select Mode: Use the control buttons to cycle through various pulse-wave and vibrating modes. Choose your preferred setting for either C-spot or G-spot stimulation.
3. Application: Apply a water-based lubricant to enhance comfort. Position the device so that the external arm aligns with your C-spot and the internal arm targets your G-spot.
4. Adjusting Settings: Experiment with different modes and intensities to find what feels most pleasurable. The dual functionalities can be adjusted independently for a customized experience.
5. Power Off: Press and hold the power button until the device powers down.

#### Cleaning and Maintenance

1. Clean After Each Use: Use a mild soap and warm water to clean the device. Alternatively, apply a toy cleaner designed for silicone products.
2. Rinse and Dry: Rinse thoroughly and pat dry with a clean towel. Avoid submerging the device in water.
3. Storage: Store the device in a cool, dry place. Avoid exposure to direct sunlight and ensure it is not in contact with other silicone products to prevent material degradation.

#### Safety Information

- Intended Use: This product is intended for personal use only. Do not share with others to maintain hygiene.
- Discontinue Use If Discomfort Occurs: If you experience any irritation or discomfort, discontinue use immediately.
- Avoid Water Submersion: While splash-proof, do not fully submerge the device in water.
- Use Only Water-Based Lubricants: Silicone or oil-based lubricants can damage the product.

Enjoy exploring the unique sensations offered by the "May - Dual Pulse-Wave & Vibrating C-spot & G-Spot Rabbit - Purple," and experience the ultimate in personal pleasure.

### Shots BV

Veesteeg 12  
6658KP Beneden-leeuwen  
The Netherlands

[customerservice@shots.nl](mailto:customerservice@shots.nl)



#### **Washing instructions**

To ensure the longevity and hygiene of your May Dual Pulse-Wave & Vibrating C-spot & G-Spot Rabbit, please follow these cleaning instructions:

1. Before First Use: Wash the product thoroughly with warm water and mild, unscented soap. Rinse well and dry with a clean, soft cloth.

2. After Each Use:

- Turn off the device and remove any batteries if applicable.
- Rinse the toy under warm water to remove any bodily fluids or lubricants.
- Use a gentle, non-abrasive soap to clean the surface. Avoid using harsh chemicals or alcohol-based cleaners as they can damage the material.
- For a deeper clean, you may use a toy cleaner specifically designed for intimate products. Follow the instructions on the cleaner for best results.

3. Drying: After cleaning, pat the toy dry with a soft, lint-free cloth. Make sure to dry all crevices to prevent moisture buildup.

4. Storage: Store your May Rabbit in a cool, dry place away from direct sunlight. Consider using a storage pouch to keep it dust-free and protected.

5. Maintenance: Regularly inspect your toy for any signs of wear or damage. If you notice any changes in texture or function, discontinue use immediately.

By following these washing instructions, you can ensure that your May Dual Pulse-Wave & Vibrating C-spot & G-Spot Rabbit remains safe, clean, and ready for use!

#### **Ingredients**

-

#### **Warnings**

Please read the following warnings before use:

1. Adult Use Only: This product is intended for use by adults aged 18 and older. Keep out of reach of children.

2. Personal Safety: Always ensure the product is clean and in good working condition before use. Inspect for any damage or wear. If the product appears damaged, discontinue use immediately.

3. Allergy Warning: This product is made from body-safe materials. However, individuals with sensitivities or allergies to silicone or other materials should exercise caution and may want to consult a physician before use.

4. Use with Lubrication: For optimal enjoyment and to prevent potential irritation, use a water-based lubricant. Avoid using oil-based or silicone-based lubricants, as they may damage the product.

5. Consult a Healthcare Professional: If you have a medical condition, are pregnant, or have any concerns about using this product, please consult a healthcare professional prior to use.

6. Electrical Safety: The product is battery-operated or rechargeable. Follow all instructions for charging and use. Do not submerge in water unless specified as waterproof. Avoid exposing the device to water if it is not designed for such use.

7. Discontinue Use if Discomfort Occurs: If you experience any pain, discomfort, or adverse reactions while using the product, stop using it immediately and seek medical advice if necessary.

8. Storage: Store in a cool, dry place away from direct sunlight and extreme temperatures.

By using the May - Dual Pulse-Wave & Vibrating C-spot & G-Spot Rabbit, you acknowledge that you have read, understood, and agree to these warnings. Enjoy responsibly!

#### **Disposal instructions**

Thank you for choosing the May Dual Pulse-Wave & Vibrating C-spot & G-Spot Rabbit. When it comes to disposing of your product, please follow these guidelines to ensure safe and environmentally-friendly disposal:

1. Clean the Product: Before disposal, ensure that the product is thoroughly cleaned. Use warm water and mild soap, and allow it to dry completely.

2. Remove Batteries: If your product contains batteries, please remove them before disposal. Batteries can be recycled at designated battery recycling locations. Check local regulations for battery disposal options.

3. Check Local Regulations: Disposal guidelines can vary by location. Please refer to your local waste management authority for specific instructions on how to dispose of electronic devices.

4. Recycling: If possible, consider recycling the product. Many electronic devices can be taken to e-waste recycling centers. Look for programs in your area that accept small electronics for recycling.

5. General Waste: If recycling options are not available, you may dispose of the product in your regular household waste. Ensure that it is securely wrapped to prevent any potential injury during disposal.

By following these steps, you can help reduce environmental impact and ensure responsible disposal of your May Dual Pulse-Wave & Vibrating C-spot & G-Spot Rabbit. Thank you for being a responsible consumer!

**DISCLAIMER:** All products purchased from Shots prior to December 13, 2024, remain marketable as they are governed by the provisions of the previous legislation.