

LELO

MIA™ 3



USER MANUAL

MIA_3_PUB1_Q324

The clitoris is the only feature of the human anatomy whose sole function is to convey messages of sensual pleasure.

Use it wisely, often, and with care.

Congratulations on acquiring MIA™ 3.

Before getting more closely acquainted with it, please take a moment to look through this user manual.

IMPORTANT

Your pleasure object has been locked for transportation. To unlock, simply connect the charger or see below.

SAFETY

- Please consult your healthcare provider with any questions or concerns you may have regarding your condition.
- This product can be used by adults only. Keep out of reach of children.
- People with reduced physical, sensory or mental capabilities or lack of experience and knowledge should use the device only if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved.
- Only use the product for the intended purpose. Sharing sex toys with other people may transmit sexual diseases. Do not share your sex toys with people other than your partner.
- Use protective measures with your partner if necessary.
- Do not use the product if you detect any cracks or signs of degradation on the covering material.
- To prevent stains, do not keep your product on the absorbent surfaces. If your product operates abnormally, turn it off and consult the support section on our website.
- Do not use the product if one or more components are damaged.

COMPLIANCE STATEMENT

a. WARNING

Please take note that changes or modifications not expressly approved in writing by the party responsible for compliance could void the user's authority to operate the equipment and/or void any relevant warranties.

b. FCC and IC statements

This device complies with Part 15 of the FCC Rules and Industry Canada license-exempt RSS.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This class B digital apparatus complies with Canadian ICES-00

b. Déclarations de la FCC et de l'IC

Cet appareil répond aux exigences de l'article 15 du Règlement de la FCC et aux normes RSS exemptes de licence d'Industrie Canada.

Son fonctionnement est soumis aux deux conditions suivantes :

- (1) cet appareil ne doit pas causer d'interférences nuisibles, et
- (2) doit accepter toute interférence reçue, notamment celles susceptibles d'entraîner un fonctionnement indésirable.

Cet appareil numérique de classe B est conforme à la norme canadienne NMB-003.


NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorienting or relocating the receiving antenna.
- Increasing the separation between the equipment and receiver.
- Connecting the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consulting the seller, the device dealer, or an experienced radio/TV technician for help.
- The device must not be co-located or operate in conjunction with any other antenna or transmitter.
- The device has been evaluated to comply with general RF exposure requirements.
- The device can be used in portable exposure conditions without restriction.
- This device complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment.
- Users can obtain Canadian information on RF exposure and compliance.

GETTING TO KNOW YOUR MIA™ 3

+ / - Power ON/OFF
& Mode selection button

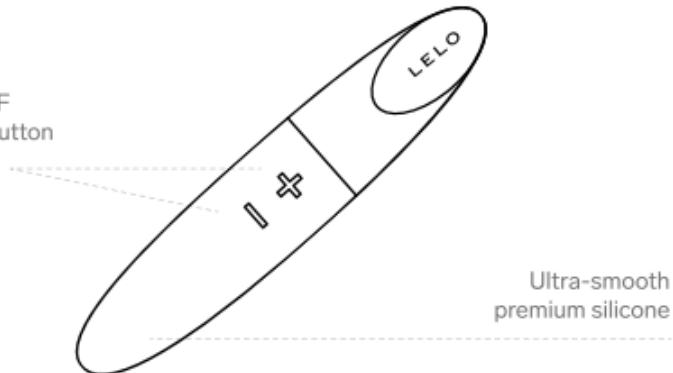

USING YOUR MIA™ 3

- Before the first use, charge your MIA™ 3 for 2 hours.
- The interface of your MIA™ 3 may be locked. Hold down the + and – buttons for 3 seconds.
- Semi-short press the “+” button to switch on.
- Double-click the “+” or “-” button to switch between 8 modes.
- Semi-short press the “-” button on level 1 to switch off.
- Semi-long press the “-“ button on the other levels to switch off.

USING MIA™ 3

How to hold




Where to place



Tip: For an even more pleasurable sensation, apply a liberal amount of LELO Personal Moisturizer to your body and to MIA™ 3 before and during use.

CHARGING YOUR MIA™ 3

- Gently remove the protective 'lipstick' cap on your MIA™ 3.
- Before charging, make sure MIA™ 3's USB plug is free from water or lubricant residue.
- Gently insert MIA™ 3's USB plug into the matching socket on your USB extension cord. Alternatively, you can connect MIA™ 3 directly to a USB socket on your computer.
- The LED will pulse to indicate MIA™ 3 is charging. When fully charged, the LED will emit a steady glow. When the battery is running low, the LED on your MIA™ 3 will emit a blinking white light.

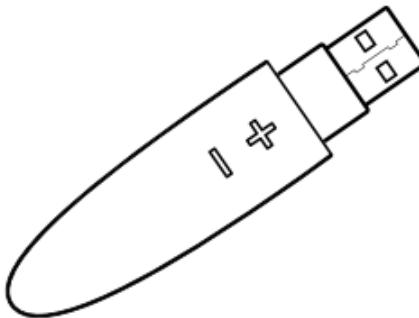

CLEANING, STORAGE, AND SAFETY

Using MIA™ 3 with hand creams or silicone-based lubricants may make the silicone permanently tacky.

MIA™ 3 is fully waterproof, making cleaning simple. Rinse and spray with LELO Toy Cleaner, then rinse again and allow it to dry.

Always clean your MIA™ 3 thoroughly before and after each use. You can wash the silicone with warm water and antibacterial soap, rinse with clean hot water, and pat dry with a lint-free cloth or towel. Never use cleansers containing alcohol, petrol, or acetone.

Avoid leaving your MIA™ 3 in direct sunlight and NEVER expose it to extreme heat. Store your MIA™ 3 in a dust-free place and keep it away from products of other materials.

The appliances must only be supplied at SELV.

TROUBLESHOOTING

The LED on your MIA™ 3 does not pulse when the charger is connected:

- The battery is drained and will require several minutes to acknowledge that it is being charged.
- The charger is not properly connected. Check the wall and USB socket.

Your MIA™ 3 does not activate when the + button is pressed:

- The battery is empty. Recharge your MIA™ 3.
- The interface of your MIA™ 3 is locked. Hold down + and – for 3 seconds.

If you experience any other problems with your MIA™ 3 or if you have any questions regarding the operation, please contact:

customercare@lelo.com

SPECIFICATIONS

Materials: ABS, Body-safe silicone

Finish: Matte

Size: 22 x 22 x 111 mm / 0.87 x 0.87 x 4.37 in

Weight: 36 g / 1.27 oz

Battery: Li-Ion 70 mAh 3.7 V

Charging: up to 2 h at 5.0 V 70 mA

Rated Power:

- **Input:** 5V 0.35W
- **Output:** 3.7V 0.4W

User time: up to 1.5 h

Standby: 90 days

Frequency: 130 Hz

Max. noise level: < 60 dB

Interface: 2 buttons

REGISTER WARRANTY

To activate your 1-year limited warranty, register the number provided on the LELO Authenticity Card at LELO.COM/SUPPORT.

1-YEAR WARRANTY

LELO warrants this pleasure object for a period of ONE (1) YEAR, after the date of original purchase, against defects due to faulty workmanship or materials. The warranty covers working parts that affect the function of the pleasure object. It does NOT cover cosmetic deterioration caused by fair wear and tear or damage caused by accident, misuse, or neglect. Any attempt to open or take apart the pleasure object (or its accessories) will void the warranty. If you discover a defect and notify LELO during the warranty period, LELO will, at its discretion, replace the pleasure object free of charge. Claims under warranty must be supported by reasonable evidence that the date of claim is within the warranty period. To validate your warranty, please keep your original purchase receipt together with these warranty conditions for the duration of the warranty period. To claim your warranty, you must log in to your account at LELO.COM and then select the option to make a warranty claim. Shipping costs are non-refundable. This undertaking is in addition to the consumer's statutory rights and does not affect those rights in any way.

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):

The crossed-out dustbin symbol indicates that this pleasure object should not be treated as household waste, but rather be brought to the appropriate collection point for the recycling of electrical and electronic equipment.



SERIAL NO.



IPX 7



MANUFACTURE DATE



CLASS B DIGITAL APPARATUS



FOLLOW INSTRUCTIONS FOR USE



Hereby, LELOi AB declares that the radio equipment type [Non-Specific Short Range Device] is in compliance with Directive 2014/53/EU. LELOi AB declares that the product is also compliant with Directive 2011/65/EU (RoHS). The full text of the EU declaration of conformity is available at the following internet address: <https://www.lelo.com/regulatory>

DISCLAIMER: Users of this product do so at their own risk. Neither LELO nor its retailers assume any responsibility or liability for the use of this product. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment. The model may be changed for improvements without notice.

© 2024 LELOi AB. All rights reserved.

LELOi AB, Karlavägen 41, 114 31 Stockholm, Sweden.

Distributed in the US by LELO USA Inc., 5799 Fontanoso Way, San Jose, CA 95138, USA.

Distributed in Australia by LELO Oceania 6 Prohasky Street, Port Melbourne, VIC 3207, Australia.

Designed and developed by LELO Sweden.

Made in China.

US and International patents or patent applications apply to this product:
visit <https://www.lelo.com/intellectual-property>

www.lelo.com