




**bathmate**<sup>®</sup>  
J U S T   A D D   W A T E R

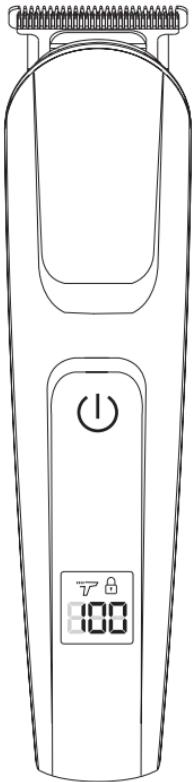

# TRIM 2.0

---

U S E R   G U I D E

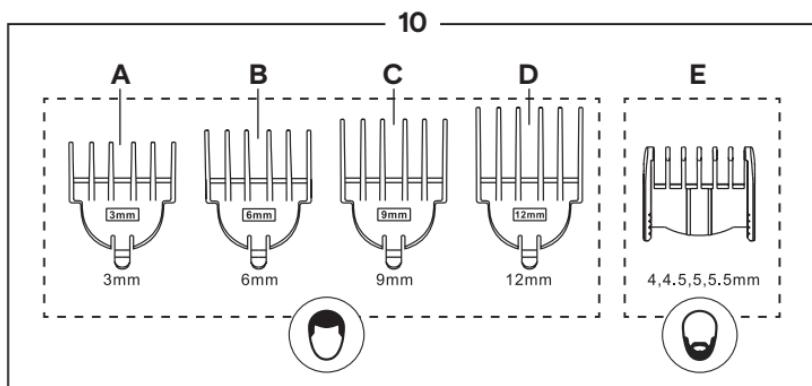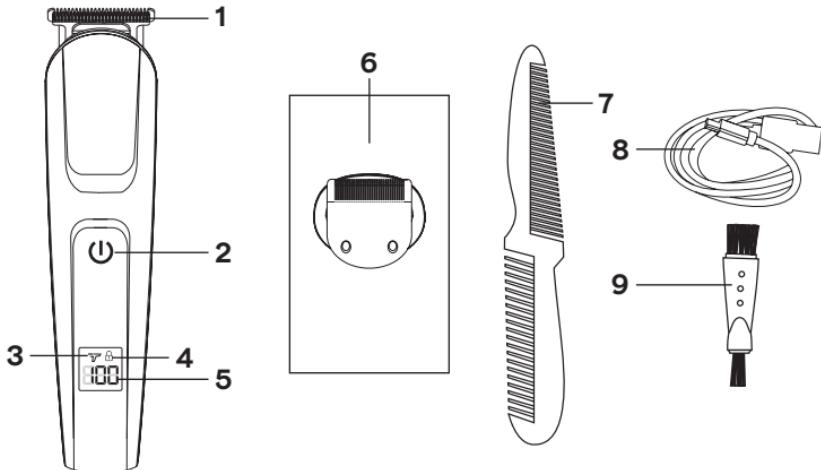

## **DESCRIPTION**

1. Hair Trimmer
2. On/off switch
3. 2-speed mode
4. Travel lock
5. Battery status LED display
6. Precision trimmer
7. Comb
8. USB charging cable
9. Cleaning brush
10. Guide combs
  - A. 3mm comb attachment
  - B. 6mm comb attachment
  - C. 9mm comb attachment
  - D. 12mm comb attachment
  - E. Comb attachment for precision trimmer. 4, 4.5, 5, 5.5mm

## **TECHNICAL SPECIFICATIONS**

Motor: DC3.6V

Input: DC5V 1A

Li-ion battery: 600mAhx1, 3.7V

Operating time: 90 minutes

Waterproof: IPX7




Type-C charge

# GETTING STARTED

## CHARGING YOUR APPLIANCE:

Before using your Bathmate Trim for the first time, charge for 2 hours.

- Ensure the product is switched off.
- Plug the USB-C charging cord into your groomer and then plug the USB-A into a USB power source (Fig 1-2).
- The LED display will indicate the amount of charge in the groomer. Once it displays 100, this means that it is fully charged (Fig 3).
- To extend the life of the batteries, allow them to fully discharge every 6 months, then charge for 2 hours.
- Only charge from DC 5V 1A adapters.

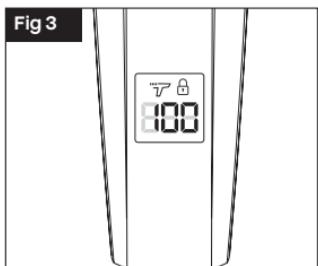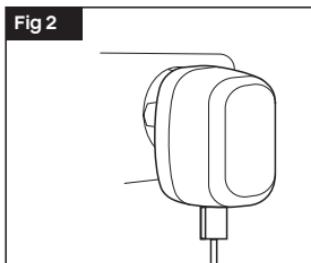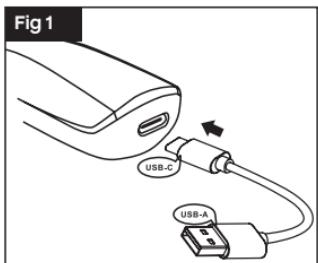

## INSTRUCTIONS FOR USE

Please note: This appliance is designed for cordless use only and should never be used when connected to the mains.

- Your groomer will arrive in 'locked' mode. To deactivate locked mode, press and hold the on/off button for 3 seconds. Your groomer will then switch on in normal speed mode. Press the on/off button again to switch to strong mode. Press the on/off button again to switch your groomer off.
- Return your groomer to locked mode by pressing and holding the on/off button for 3 seconds.

## Attaching and removing the trimming attachments

- To attach the guide combs onto the full size trimmer, slide the desired comb into position and click into place (fig 4).
- To remove the guide combs, press down on the flat part of the comb with your thumb and pull upwards with your index finger (fig 5).
- To attach the precision trimmer, firstly remove the full size trimmer by pressing down on the flat part with your thumb and pull upwards with your index finger (fig 6).
- Attach the precision trimmer by aligning the base of the head with the lock and click into position (fig 7).
- To attach the precision trimmer guide comb, slide the comb over the blade and click into position (fig 8). Slide the comb up and down to desired length, as indicated on the comb. To remove, slide the comb up and off the trimmer (fig 9).

Fig 4

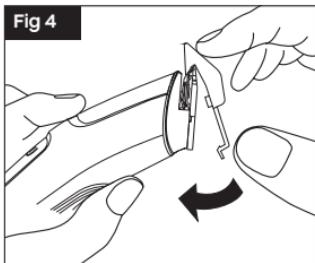


Fig 5

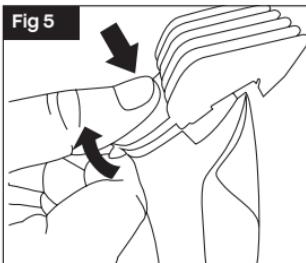


Fig 6

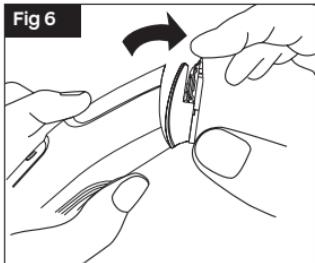


Fig 7

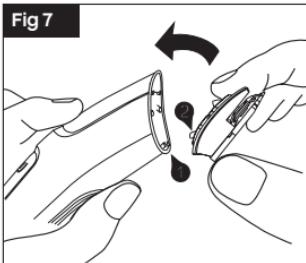


Fig 8


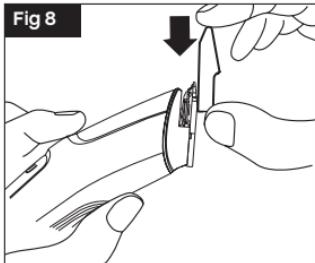


Fig 9

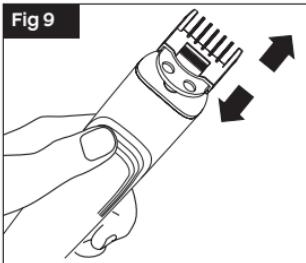

## CARE FOR YOUR BATHMATE TRIM

To ensure a long lasting performance, we recommend that you clean your Bathmate Trim after each use.

- Always ensure that the appliance is switched off before cleaning.
- Brush any accumulated hairs from the trimmer and attachment heads (Fig 10-11).
- Place 1 or 2 drops of cutter oil or sewing machine oil on the blades.
- Turn the trimmer on to distribute the oil evenly. Wipe away any excess oil.

Fig 10


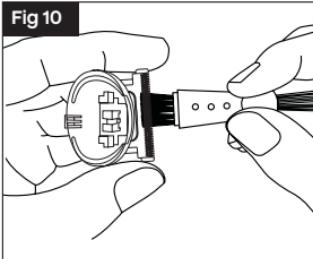


Fig 11

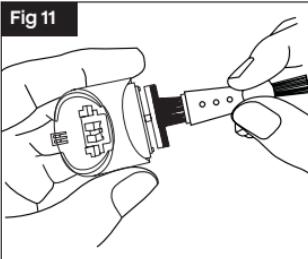

## CLEANING PRECAUTIONS

- Only the guide comb attachments and trimmer head can be removed from the appliance for cleaning.
- Cleaning should only be done with a soft brush.
- Do not use harsh or corrosive cleaning products on the unit or blades.

## CORRECT DISPOSAL OF THIS PRODUCT

(Waste Electrical & Electronic Equipment, WEEE)



This product is designed and manufactured with high quality materials and components which can be recycled and reused. This symbol means that that electrical and electronic equipment, at their end-of-life should be disposed of separately from your household waste. Please dispose of this product at your local community waste collection/recycling center.

**Do not discard this appliance in a fire or mutilate the battery as this gives cause for the release of toxic materials.**

This product does not contain environmentally hazardous materials (lead, mercury, cadmium, hexavalent chromium and brominated flammable agents: PBB and PBDE).

This product complies with European safety and electrical interference directive. It does not contain environmentally hazardous materials (lead, mercury, cadmium, hexavalent chromium and brominated flammable agents: PBB and PBDE).

**RoHS** 2002/95/EC



100 - 240 V  
50 - 60 Hz

## **WARRANTY**

The Bathmate Trim is designed to provide many years of trouble free use. It is covered by a 1 year warranty against defective parts or poor workmanship. Full details of the warranty and what to do in the unlikely event that your Trim is faulty can be found at:

<https://bathmatedirect.com/support>.

## **WARNING - TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE OR INJURY TO PERSONS:**

- Use this appliance only for its intended purpose, as outlined in this guide.
- Do not use this product if it is not working correctly or if it has been dropped or damaged.
- This appliance should never be left unattended when plugged into a power outlet.
- Keep this appliance away from heated surfaces.
- Ensure that the power cord does not get wet.
- Do not plug or unplug the appliance with wet hands.
- Do not use this appliance whilst connected to a power outlet.
- Do not twist or kink the cable or wrap it around the appliance.
- Do not connect the charging cable if it is damaged.
- Charge, use and store this appliance at a temperature between 15°C and 35°C.
- Do not use any attachments other than those supplied with this appliance.
- Always unplug the appliance when disassembling.
- Keep this appliance out of the reach of children. The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazards. Persons responsible for their safety must give explicit instructions or supervise the use of this appliance.



For multi-language support

**SCAN ME**



[www.bathmatedirect.com](http://www.bathmatedirect.com)

Manufactured in China, assembled in the UK by DX Products Ltd  
Unit 1, Horbury Junction Industrial Estate, Calder Vale Road,  
Horbury, Wakefield, WF4 5ER, UK

+44 (0) 800 808 5594

[support@bathmatedirect.com](mailto:support@bathmatedirect.com)