

## **VIBRATOR CARE INSTRUCTIONS**

**Take care when using the vibrator for the first time, vibration can be intense**

1. Clean your vibrator after every use
2. Take care when cleaning your vibrator. Remember it is an electrical item, moisture can damage the product and also react with the batteries
3. Always remove the batteries before cleaning & after using your vibrator in order to keep it in optimum condition
4. Keep your vibrator clean & dry, store in a dry place, moisture can damage the batteries & the motor
5. Always store your vibrator separately, different materials have different chemical configurations & may react with each other
6. Always allow your vibrator to cool down before storing in a safe place, vibrators are electrical & motors get warm with use
7. Excessive usage of the vibrator will wear out the motor & may cause the motor to over heat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing to use
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries

## WARNING

- To avoid injury or aggravation of pre-existing conditions, this device should not be used on swollen calves or unexplained calf pain
- If you are unsure or pregnant – please consult a doctor before use.
- By following these simple guidelines we are sure your new sex toy will give you great pleasure many times
- **THIS IS NOT A CHILDREN'S TOY – ADULT USE ONLY**
- **Not for use by persons under the age of 18**
- Please retain all packaging since it contains important information.

**WEEE:** This product is classified as Electrical & Electronic Equipment. Should the time come for you to dispose of this product, please ensure that you do so in accordance with the European Waste of Electrical and Electronic Equipment (WEEE) Directive and compliance with local laws relating to this directive.


This product is guaranteed for 12 months from date and proof of purchase. For use in water up to 1 meter depth for up to 30 mins. Caution : If the product is used in close contact with high power water jets (such as a jacuzzi) or has been left fully submerged for an extended period, it may extensively damage or effect the enjoyment and longevity of the product.

## **BATTERY CARE INSTRUCTIONS:**

**IF THE BATTERY COMPARTMENT CONTAINS A  
PROTECTIVE SHEATH PLEASE DO NOT REMOVE.**

- Do not mix different types of battery brands, or mix new & used batteries, as this may affect the performance of your toy.
- Only use the recommended type of batteries, as stated on the package.
- Batteries must be inserted with the correct polarity (+/-).
- Only operate when fully assembled in accordance with instructions **(See diagram)**.
- The supply terminals should not be short circuited i.e. do not bridge terminals with metallic material.
- Take care when cleaning your toy remembering it is an electrical item & moisture can damage your toy & also react with the batteries.
- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- To maintain battery life remove batteries after each use & before cleaning, this will help to keep your toy in optimum condition.
- Exhausted batteries should be removed from the product & recycled in accordance with manufacturers recommendations.
- Store your vibrator in a clean dry environment as moisture can damage the batteries & the motor.
- Take care when using oils & lubricants that they do not enter the battery compartment as they can react with the batteries.

WHEN ALL ELSE FAILS, CHECK YOUR BATTERIES, THEY ARE  
USUALLY THE PROBLEM. RENEW YOUR BATTERIES TO RETURN  
YOUR VIBRATOR TO OPTIMUM PERFORMANCE.

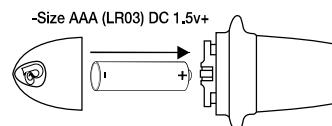

Remove battery isolator disc before use.  
Press button to turn on/change function.  
Hold button for 3 seconds to turn off.



Cartone di fibra non ondulato.  
Controlla le linee guida del tuo comu-



e. Please keep packaging for future reference.