



Inflatable Rabbit Vibrator - Peacock Blue

Product Information

Item number	LOVE064TEA
EAN code	8714273048950
Brand name	Loveline by Shots

Declaration of Conformity

[Download](#)

Instructions for use

Thank you for choosing the Inflatable Rabbit Vibrator - Peacock Blue. Please read these instructions carefully to ensure safe and effective use of the product.

Getting Started:

1. Unpack the Product:
 - Carefully remove the Inflatable Rabbit Vibrator - Peacock Blue from its packaging.
 - Inspect the product to ensure it is free from damage before use.
2. Powering On:
 - Locate the power button on the device.
 - Press and hold the power button for a few seconds until the device turns on.
3. Inflation Mechanism:
 - To activate the inflatable feature, press the designated inflation button.
 - Adjust the inflation level to your desired comfort by pressing the button multiple times. To deflate, press and hold the inflation button until the desired size is reached.
4. Vibration Settings:
 - The device offers multiple vibration modes.
 - Use the vibration control button to cycle through different settings and find the one that suits you best.
5. Using the Rabbit Feature:
 - The rabbit attachment is designed to provide additional stimulation.
 - Ensure the attachment is positioned correctly for optimal effect.

Using the Product:

1. Lubrication:
 - Apply a water-based lubricant to the vibrator before use to enhance comfort.
2. Insertion:
 - Gently insert the vibrator as desired. Adjust the inflation and vibration settings for comfort and pleasure.
3. Experiment and Enjoy:
 - Experiment with different vibration modes and inflation levels to discover what feels best for you.

After Use:

1. Power Off:
 - Press and hold the power button to turn off the device.
2. Cleaning:
 - Clean the vibrator with warm water and mild soap or a suitable toy cleaner.
 - Rinse thoroughly and pat dry with a clean towel.
3. Storage:
 - Store the vibrator in a cool, dry place away from direct sunlight.

Safety Precautions:

- Do not overinflate the device.
- Discontinue use if you experience any discomfort or pain.
- Keep out of reach of children.
- This product is for adult use only.

Enjoy your Inflatable Rabbit Vibrator - Peacock Blue responsibly and safely for an enhanced experience.



Shots BV

Veesteeq 12
6658KP Beneden-leeuwen
The Netherlands

customerservice@shots.nl

Washing instructions

To ensure the longevity and hygiene of your Inflatable Rabbit Vibrator - Peacock Blue, please follow these cleaning instructions carefully:

1. Before First Use: Wash the vibrator with warm water and mild, unscented soap. Rinse thoroughly and dry with a soft cloth.
2. After Each Use: Clean the vibrator promptly to maintain its quality and hygiene.
 - Wipe Down: Use a damp cloth with mild soap to gently wipe the surface of the vibrator.

- Avoid Submerging: Do not submerge the vibrator in water, as it is not waterproof.
- 3. Disinfecting: For added cleanliness, you can use a toy cleaner specifically designed for adult products. Follow the manufacturer's instructions on the cleaner for best results.
- 4. Drying: Allow the vibrator to air dry completely before storing it. Avoid using heat sources or direct sunlight.
- 5. Storage: Store the Inflatable Rabbit Vibrator - Peacock Blue in a cool, dry place away from direct sunlight and extreme temperatures. It is recommended to keep it in a soft pouch or case to prevent any damage.

By following these instructions, you can ensure that your Inflatable Rabbit Vibrator - Peacock Blue remains safe, clean, and ready for use. Enjoy!

Ingredients

-

Warnings

Important Safety Information:

1. Intended Use: This product is designed for adult use only. It is not a toy for children.
2. Inflation Caution: Ensure that the vibrator is properly inflated before use. Over-inflation may cause damage to the product. Follow the instructions provided for safe inflation levels.
3. Material Sensitivity: This product is made from materials that some individuals may be sensitive or allergic to. If you experience any irritation, discontinue use immediately and consult a healthcare professional.
4. Battery Safety: Use only the recommended type and size of batteries. Do not mix old and new batteries or different brands. Remove batteries when the product is not in use to prevent leakage.
5. Water Resistance: Although this product may be water-resistant, do not submerge it in water. Avoid use in water unless specified by the manufacturer.
6. Hygiene: Clean the product thoroughly before and after each use with mild soap and warm water. Avoid using harsh chemicals or abrasive materials that may damage the surface.
7. Avoid Sharing: This product is intended for individual use. Sharing may increase the risk of infection or irritation.
8. Consultation: If you have any medical conditions or are pregnant, consult a healthcare professional before use.
9. Storage: Store in a cool, dry place away from direct sunlight. Keep out of reach of children and pets.

By following these warnings and guidelines, you can help ensure a safe and pleasurable experience with your Inflatable Rabbit Vibrator - Peacock Blue. Enjoy responsibly!

Disposal instructions

Thank you for choosing the Inflatable Rabbit Vibrator - Peacock Blue. To ensure safe and environmentally friendly disposal of your product, please follow these instructions:

1. Cleaning: Before disposal, ensure that the product is thoroughly cleaned. Use warm water and mild soap to wash the exterior, then rinse and dry completely.
2. Disposal: As this product contains electronic components, it should not be disposed of with regular household waste. Please consider the following options:
 - Electronic Recycling: Look for local e-waste recycling programs or facilities that accept electronic devices. They can safely dispose of or recycle the electronic components.
 - Plastic Recycling: If the product is made of recyclable materials, separate any plastic parts and check with your local recycling guidelines to see if they can be recycled.
3. General Waste: If you cannot find appropriate recycling options, you may dispose of the product in your regular waste. However, we encourage you to prioritize recycling whenever possible.
4. Batteries: If your product contains batteries, please remove them before disposal and recycle them at designated battery recycling points.

By following these disposal instructions, you help contribute to a cleaner environment. Thank you for your consideration!