

## **Doxy Go Instruction Manual**

### **Welcome to the Doxy Go Experience**

Congratulations on purchasing the **Doxy Go**, a compact, powerful, and travel-friendly wand massager. This innovative device combines luxury, portability, and the renowned deep, rumbling vibrations of Doxy. Whether you're at home or on the move, the Doxy Go is your ultimate pleasure companion.

### **Product Overview**

The **Doxy Go** is designed with portability and convenience in mind, offering powerful performance in a compact size. With an aluminium body, waterproof design, and intuitive controls, this massager is perfect for discreet, versatile use.

### **Key Specifications:**

- Length: 16cm / 6"
- Weight: 144g / 0.31 lbs
- Material: Aluminium body with soft silicone head
- Vibration Options: 5 intensity levels and 6 patterns
- Power Supply: Rechargeable with pin-to-USB cable
- Battery Life: 60 minutes of continuous use
- Waterproof: IPX7-rated

### **Getting Started**

#### **Charging Your Doxy Go:**

1. Connect the pin-to-USB charging cable to the device and a USB power source.
2. The indicator light will pulse while charging. Once fully charged, the light will remain steady.
3. A full charge provides up to 60 minutes of continuous use.

#### **First-Time Use:**

Before using, clean the device with warm water and mild soap or a suitable toy cleaner. Ensure the device is fully charged for optimal performance.

## How to Operate

1. **Power On/Off:** Press and hold the power button for a few seconds to turn the device on or off.
2. **Cycle Through Patterns:** Quickly press the power button to switch between the 6 vibration patterns.
3. **Adjust Intensity:** Use the + and – buttons to increase or decrease the intensity across 5 levels.
4. **Travel Lock:** To activate or deactivate the travel lock, press and hold the power and – buttons simultaneously for a few seconds. This prevents accidental activation while travelling.

## Using Your Doxy Go

### For Optimal Results:

- Apply water-based lubricant to the silicone head for a smoother experience.
- The flexible neck allows the head to move with your body for precise stimulation.
- Experiment with the vibration patterns and intensity levels to find what suits you best.

**In the Bath or Shower:** The Doxy Go is fully waterproof, so you can safely enjoy it in the bath or shower.

## Care and Maintenance

1. **Cleaning:** After each use, clean the device with warm water and a mild soap or a toy cleaner. Avoid submerging the charging port whilst connected.
2. **Storage:** Ensure the device is completely dry before storing it in the provided drawstring bag.
3. **Charging:** Recharge as needed using the included pin-to-USB cable.

## Safety Information

- Do not use the device if it appears damaged.
- Use only the included charger or compatible accessories.
- Keep out of reach of children and pets.
- This device is for external use only.
- Do not use near water while the device is connected to the cable.

## Warranty Information

The Doxy Go comes with a 12-month warranty against manufacturing defects. Register your product within 30 days of purchase to extend your warranty to 2 years. If you need assistance or wish to make a claim, please complete the [warranty form](#) as your first step. For general inquiries or additional help, visit our website or contact us at [help@doxymassager.com](mailto:help@doxymassager.com). We're here to assist you!

Warranty Form: <https://doxymassager.com/product-warranties/>