

Gillette ProGlide Razor

Directions

How do you change Gillette ProGlide razor PROBLADES?

The ProGlide razor features an easy-release button at the back of the cartridge. Switching out the razor head is simple - just connect the head and wait for the click. The ProGlide handle is compatible with all PRO razor blade heads, along with the Fusion5 and SkinGuard Sensitive families. You'll know when it's time to change your PROBLADES when your shave stops feeling as comfortable as before.

How do you clean the Gillette ProGlide razor?

It's important to clean your razor after every few strokes to remove any trapped hairs that could affect the glide. Rinse it in water to remove gel, foam, and shaved hair. For best results, alongside ProGlide PROBLADES, we recommend applying a Gillette PRO Sensitive prep. However, do not tap your razor against anything hard or wipe it with a towel because this can damage the cartridge's triple blade stabilizer or the blades themselves. After shaving, once you've rinsed your razor for the final time, you can let it dry naturally, ideally in a vertical position. Both the Gillette razor stand and mini hanger are convenient solutions designed to store your razor in an upright position.

Ingredients:

PEG-115M, PEG-7M, PEG-100, SILICA, PENTAERYTHRITYL TETRA-DI-T-BUTYL HYDROXYHYDROCINNAMATE, TRIS(DI-T-BUTYL)PHOSPHITE, BHT

Keep out of reach of children.

Handle with care.

Replace cartridges safely.

Dispose of used cartridges properly.

Do not use on irritated or broken skin.

Rinse blades thoroughly after use.