



User Manual



Patina

Vibrating Rose Bullet Necklace

Please read this User Manual carefully before use and follow the instructions.



Sold as a Novelty Only

Specifications:

Product Name	Patina (TPC1023)	Material	Silicone+ABS
Color	Red Bullet Rose Gold Chain	Function	10 Speed Vibration
Size	2.48"x1.02" Pendant 27" Chain	Time	Approx. 60 Minutes Charging Approx. 50 Minutes Use
Waterproof	IPX7	Charging	USB Charging

Package: Vibrator*1, Charging Cable*1, Manual*1

Instructions:

Hold the power button  for 2 seconds to Turn On/Off The vibrator. Click the  to switch between 10 vibration modes.

Charging:

- Please charge the product before and after each use.

- The indicator light flashes while charging. When charging is complete, the indicator light stops flashing and stays on.

Cleaning and Storage:

- Store the product in a cool, dry place and avoid exposure to heat and direct sunlight
- Thoroughly clean the products before and after each use. Clean the product with antibacterial soap and water, rinse with clean water and dry thoroughly.

Safety:

- Sold as a Novelty Only
- For external use. For health reasons, do not share this toy with others. Such use is at your own risk.
- If using lubricant, use a water-based lubricant ONLY. DO NOT USE silicone-based lubricants, massage oils, hand creams, lotions, or similar non-water-based lubricants with this product.
- Keep out of Reach of Children and Pets
- Discontinue use immediately if you experience any discomfort.
- DO NOT attempt to take apart or disassemble the product. Any such attempt voids any warranty.

Limited Product Warranty:

THE PLEASURE COMPANY ("Company") expressly warrants to the original purchaser that, for a period of one (1) year from the date of purchase, the product purchased ("Product") will be reasonably free of defects in materials and workmanship, and that when properly handled, will conform, within accepted tolerance, to applicable specifications. This Limited Warranty only applies to Company's Products which are used and maintained in the manner recommended by Company.

Company, after confirming any claimed defect will replace Product without charge if the Product fails or does not perform as warranted solely due to a manufacturing defect within the warranty period, subject to the exclusions set forth in this Limited Warranty. Company shall not be responsible for the cost of returning Product to us, and Company shall not be responsible for any incidental damage to anything other than the product itself. During the entire one (1) year warranty, Company's obligation as to replacement shall further be limited to replacement with a similar style or model, if the exact Product is no longer available at the time of replacement. Any replaced product shall also remain subject to the original one (1) year warranty from the date of the original purchase, and replacement shall not extend the original warranty period in any manner or start a new warranty period. You may obtain coverage under this Limited Warranty by emailing Company at info@tpcshop.com, including your name and address, describing the issue, and including a copy of your proof of purchase from us or an authorized retailer. Once we receive via email a proof of purchase, we will provide instructions on returning the product to us. Customer is responsible for return shipping. We will not accept any return without proof of purchase. This Limited Warranty is not transferable.

Contact:

Please visit our website for more information on product warranty and service support. TPCSHOP.COM. Any additional questions please contact us at info@tpcshop.com.

Manual de Uso

Patina

Collar Vibrador de Rosa



Especificaciones:

Nombre de Producto	Patina (TPC1023)	Material	Silicona+ABS
Color	Bala Roja Cadena de Oro Rosa	Modalidades	10 Modos de vibración
Tamaño	2.48"x1.02" Colgante 27" Cadena	Tiempo de uso	Approx. 50 Minuto
Resistente al Agua	IPX7	Recargable	Carga USB

Paquete: Vibrador, cable de carga, Manual de Uso

- Por favor lea este Manual de Uso detalladamente antes de usar el producto y seguir las instrucciones.
- Vendido para Uso recreativo solamente
- Por favor mantenga este producto limpio despues de usarlo. No use limpiadores con quimicos fuertes.

Información:

- Presione y mantenga  por 2 segundos para Encender/Apagar el vibrador.
- Presione  para cambiar entre los 10 modos de vibraciones

Instrucciones de carga:

- Por favor cargue el producto antes y después de cada uso
- La luz indicadora parpadea mientras está recargando. Cuando la carga esta completa, la luz indicadora deja de parpadear y se queda encendida.

Mantenimiento:

- Limpieza: Limpie el producto antes y después de cada uso
- Almacenamiento: Mantenga el producto en un sitio seco y de temperatura fresca. Evite luz solar directa.

Seguridad:

- Vendido solo para uso recreativo
- Para uso externo. Por motivos de salud, no comparta este producto con otras personas.

- Si usa lubricante, asegurese que sea a base de agua . NO USE lubricantes a base de silicona, aceites de masaje, cremas de mano, lociones, o lubricantes similares que no sean a base de agua con este producto.
- Mantenga fuera del alcance de niños o mascotas
- Descontinuar el uso inmediatamente si experimenta cualquier tipo de incomodidad.
- No Intente separar el producto por partes. Este tipo de intentos anula la garantía.

Garantía de Producto Limitada

THE PLEASURE COMPANY ("Company") expresivamente garantiza al comprador original que, por un periodo de un (1) año desde la fecha de compra, el producto comprado ("Producto") estará razonablemente libre de defectos en materiales y manufacturación, y que cuando sea manejado apropiadamente, será conforme, dentro de la tolerancia aceptada, a las especificaciones aplicables. Esta Garantía Limitada solo aplica a los productos de la Empresa que son usados y mantenidos en la forma que recomienda la Empresa.

Para más información sobre la garantía y servicio del producto, por favor visite nuestra página web www.tpcshop.com o envíenos un correo a info@tpcshop.com