

VIBRATOR CARE INSTRUCTIONS

- Take care when using the vibrator for the first time, vibration can be intense
- Clean your vibrator after every use
 - Take care when cleaning your vibrator Remember it is an electrical item, moisture can damage the product and also react with the batteries
 - Keep your vibrator clean and dry, store in a dry place,moisture can damage batteries and motor
 - Always store your vibrator separately, different materials have different chemical configurations and may react with each other
 - Always allow your vibrator to cool down before storing in a safe place, vibrators are electrical and motors get warm with use
 - Excessive usage of the vibrator will wear out the motor and may cause the motor to over heat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing to use

RECHARGEABLE PRODUCTS INSTRUCTIONS ON CHARGING

- The product has a USB lead for charging, you can insert it into a computers USB port or any other USB power supply
- The product may be partially charged on purchase but we recommend a full charging cycle before use. Charge the battery for at least 40 minutes before use.
- BE PATIENT - Do not switch on or use your vibrator during this first charging session, as this may affect the battery capacity.

WEEE:

This product is classified as Electrical and Electronic Equipment. Should the time come for you to dispose of this product, please ensure that you do so in accordance with the European Waste of Electrical and Electronic Equipment (WEEE) Directive and compliance with local laws relating to this directive..



RECHARGEABLE BATTERY INFORMATION

This product contains a Lithium Rechargeable Battery Pack. If battery leakage occurs, stop using immediately and avoid contact with skin. If skin contact occurs, immediately wash the are thoroughly with warm soapy water. If liquid leakage comes into contact with eyes or body tissue, immediately flush thoroughly with water and see a doctor. Treat this product with care to avoid battery leakage, combustion and explosion. Do not expose the battery pack to excessive physical shock. Do not take apart or attempt to repair the vibrator or battery. Do not touch the terminals of the vibrator with any metal objects.

WARNING

- To avoid injury or aggravation of pre-existing conditions,this device should not be used on swollen calves or unexplained calf pain
- If you are unsure or pregnant – please consult a doctor before use.
- By following these simple guidelines we are sure your new sex toy will give you great pleasure ... many, many, times
- Please retain all packaging since it contains important information
- THIS IS NOT A CHILDREN'S TOY – ADULT USE ONLY
- Not for use by persons under the age of 18

IMPORTANT INFORMATION

This product must only be used with the charging device and cable supplied. Do not use the product when it is plugged in for charging. The power supply and vibrator should be regularly examined for damage. In the event of damage, do not use. Only operate when fully charged in accordance with instructions. Always store the adapter or charging unit and any associated cables in a dry place. Always charge this product in a dry place. Always disconnect from the power supply before cleaning this product.

This product is guaranteed for 12 months from date and proof of purchase. For use in water up to 1 meter depth for up to 30 mins. Caution: If the product is used in close contact with high power water jets (such as a jacuzzi) or has been left fully submerged for an extended period, it may extensively damage or effect the enjoyment and longevity of the product.

 
CLIMAXIMUM

SPIRIT RECHARGING INSTRUCTIONS

- Attach the magnetic USB head to the toy instructed below, and plug in to USB power source.
- The light will be constant while the product is charging.
- When fully charged the light will flash.
- The toy will complete its charge in around 3 hours.
- For optimal performance fully charge the product before your first use.
- Remove magnetic head from toy and disconnect from power source once charging is completed.

CHARGING YOUR SPIRIT

- (A) Before you first use, please charge the product fully.
- (B) Once charged the LED will flash continuously, the product can now be unplugged and used.

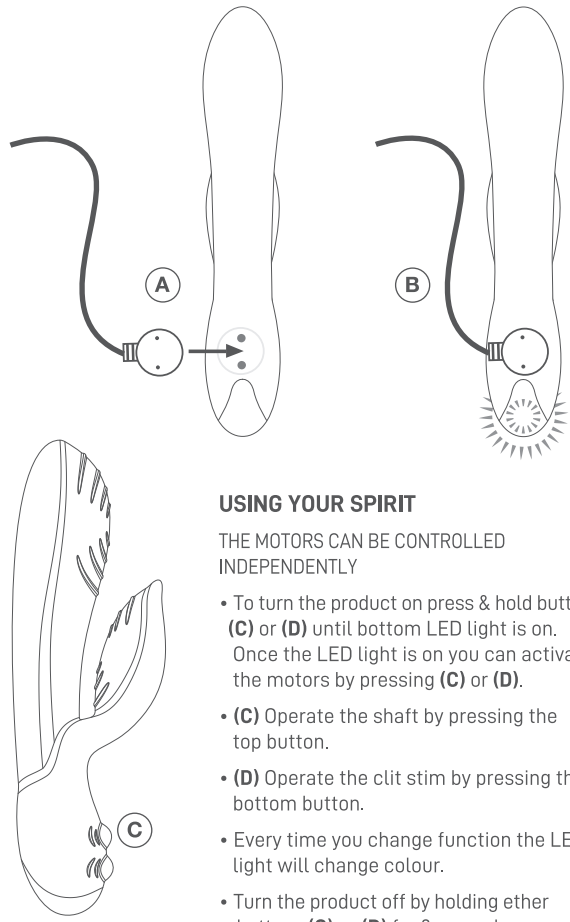

USING YOUR SPIRIT

THE MOTORS CAN BE CONTROLLED INDEPENDENTLY

 
- To turn the product on press & hold button (C) or (D) until bottom LED light is on. Once the LED light is on you can activate the motors by pressing (C) or (D).
- (C) Operate the shaft by pressing the top button.
- (D) Operate the clt stim by pressing the bottom button.
- Every time you change function the LED light will change colour.
- Turn the product off by holding ether buttons (C) or (D) for 3 seconds.

TYRO RECHARGING INSTRUCTIONS

- Attach the magnetic USB head to the toy instructed below, and plug in to USB power source.
- The light will be constant while the product is charging.
- When fully charged the light will flash.
- The toy will complete its charge in around 3 hours.
- For optimal performance fully charge the product before your first use.
- Remove magnetic head from toy and disconnect from power source once charging is completed.

CHARGING YOUR TYRO

- (A) Before you first use, please charge the product fully.
- (B) Once charged the LED will flash continuously, the product can now be unplugged and used.

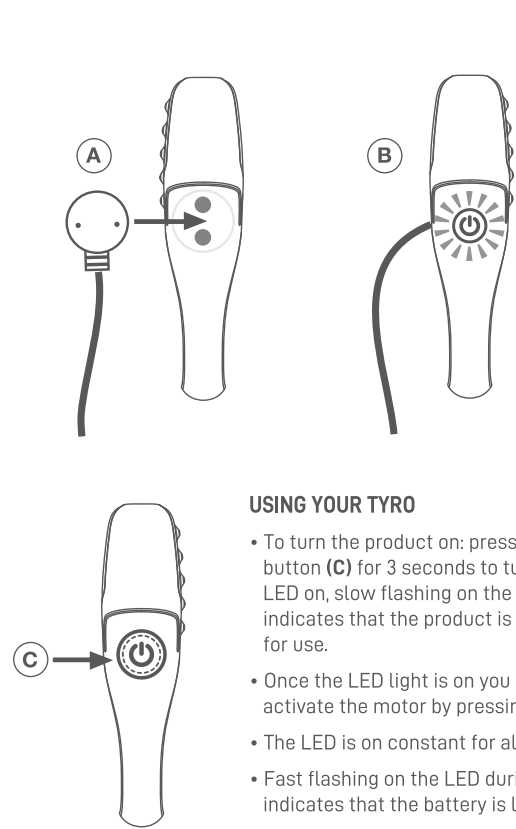

USING YOUR TYRO

- To turn the product on: press and hold button (C) for 3 seconds to turn the LED on, slow flashing on the LED indicates that the product is ready for use.
- Once the LED light is on you can activate the motor by pressing (C).
- The LED is on constant for all settings
- Fast flashing on the LED during use indicates that the battery is low.
- Cycle up through the settings by pressing button (C)
- Turn the product off by holding button (C) for 3 seconds