

LELO

SURFER™ 2



USER MANUAL

SURFER 2_PUB1_Q126

LELO SURFER™ 2 is your invitation to reach
your orgasmic potential and explore a hidden,
different type of pleasure.

Congratulations on acquiring LELO SURFER™ 2.

Before getting more closely acquainted with it, please take a moment to look through this user manual.

IMPORTANT

Your pleasure object has been locked for transportation. To unlock, simply connect the charger or see below.

SAFETY

- Please consult your healthcare provider with any questions or concerns you may have regarding your condition.
- This product can be used by adults only. Keep out of reach of children.
- People with reduced physical, sensory or mental capabilities or lack of experience and knowledge should use the device only if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved.
- Only use the product for the intended purpose. Sharing sex toys with other people may transmit sexual diseases.
- Do not share your sex toys with people other than your partner.
- Use protective measures with your partner if necessary.
- Do not use the product if you detect any cracks or signs of degradation on the covering material.
- To prevent stains, do not keep your product on the absorbent surfaces. If your product operates abnormally, turn off and consult the support section on our website.
- Do not use the product if one or more components are damaged.

COMPLIANCE STATEMENT

a. WARNING

Please take note that changes or modifications not expressly approved in writing by the party responsible for compliance could void the user's authority to operate the equipment and/or void any relevant warranties.

b. FCC and IC statements

This device complies with Part 15 of the FCC Rules and Industry Canada license-exempt RSS.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This class B digital apparatus complies with Canadian ICES-003.

b. Déclarations de la FCC et de l'IC

Cet appareil répond aux exigences de l'article 15 du Règlement de la FCC et aux normes RSS exemptes de licence d'Industrie Canada. Son fonctionnement est soumis aux deux conditions suivantes :

- (1) cet appareil ne doit pas causer d'interférences nuisibles, et
- (2) doit accepter toute interférence reçue, notamment celles susceptibles d'entraîner un fonctionnement indésirable.

Cet appareil numérique de classe B est conforme à la norme canadienne NMB-003.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorienting or relocating the receiving antenna.
- Increasing the separation between the equipment and receiver.
- Connecting the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consulting the seller, the device dealer or an experienced radio/TV technician for help.
- The device must not be co-located or operate in conjunction with any other antenna or transmitter.
- The device has been evaluated to comply with general RF exposure requirements.
- The device can be used in portable exposure conditions without restriction.
- This device complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment.
- Users can obtain Canadian information on RF exposure and compliance.


GETTING TO KNOW YOUR LELO SURFER™ 2

Unisex Anal Vibrating Plug

(()) Power
ON/OFF & Mode
selection button

Ultra-smooth
premium silicone

Charging port

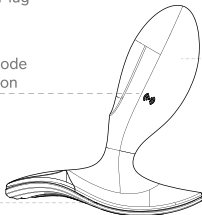

HOW TO FIND FCC ID AND IC INFORMATION IN THE USER APP

- Open the “LELO™ app”
- Click “Menu”
- Click “Legal & Regulatory”
- Click “LELO SURFER™ 2”
- FCC ID: ZT5-ORIGINAL3
- IC: 9798A-ORIGINAL3
- HVIN: SURFER™ 2
- PMN: Handheld massager

USING YOUR LELO SURFER™ 2

HOW TO USE YOUR PRODUCT WITHOUT THE LELO™ APP

- Before the first use, charge your LELO SURFER™ 2 for 2 hours.
- Press the (()) button to turn it on.
- The LED lights will blink, showing the battery level.
- The LED lights will go steady, showing the vibration level.
- Press the (()) button to switch between 4 different modes.
- Press the (()) button for 3 seconds to turn it off.

HOW TO USE YOUR PRODUCT WITH THE LELO™ APP

- Before the first use, charge your LELO SURFER™ 2 for 2 hours.
- **DOWNLOAD THE [IOS](#) / [ANDROID](#) version.**
- Press the (()) button for 3 seconds to turn it on while activating the Bluetooth.
- All the LED lights will blink simultaneously, showing the Bluetooth pairing.
- Open the LELO™ app and locate the toy icon at the bottom of the screen. Find your LELO SURFER™ 2 and select "Connect". Press and hold the button on your device. Confirm the connection by pressing the button on your product again.
- Go to "MY LELO TOYS" and select "PLAY".
- Choose between 4 regular control modes - Manual, Screw, Shake, Swiping or 2 additional advanced modes - Finish Me Off and Out Of Control.
- Go to "SETTINGS" to set your device according to your preferences.
- Click the "SAVE" button at the bottom of your screen to save settings for offline use.
- Use the drop-down menu to set the default auto power off to 10-20 minutes. The battery level is in the upper left corner.

For more information about the LELO™ app, use the detailed instruction manual located [HERE](#).

USING LELO SURFER™ 2

How to hold



Where to place on the body




Keep in mind that after 20 minutes of inactivity, LELO SURFER™ 2 will initiate automatic shutdown to save battery.

Tip: For an even more pleasurable sensation, apply a liberal amount of LELO Personal Moisturizer to your body and to LELO SURFER™ 2 before and during use.

CHARGING YOUR LELO SURFER™ 2

- Insert the DC plug into the DC port at the base of your LELO SURFER™ 2.
- Insert the mains plug into a USB Port. The LED on the interface of your LELO SURFER™ 2 will pulse to indicate it is charging. When it is fully charged, the LED will emit a steady glow. When the battery is running low, the LED on your LELO SURFER™ 2 will emit a blinking white light.

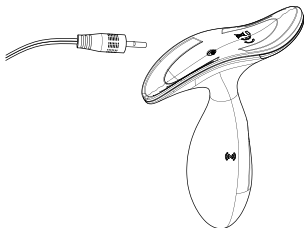

Only use the original chargers provided by LELO with your LELO SURFER™ 2.

CLEANING, STORAGE, AND SAFETY

Using LELO SURFER™ 2 with hand creams or silicone-based lubricants may make the silicone permanently tacky.

LELO SURFER™ 2 is fully waterproof, making cleaning simple. Rinse and spray with LELO Toy Cleaner, then rinse again and allow it to dry.

Always clean your LELO SURFER™ 2 thoroughly before and after each use. You can wash the silicone with warm water and antibacterial soap, rinse with clean hot water, and pat dry with a lint-free cloth or towel. Never use cleansers containing alcohol, petrol, or acetone.

Avoid leaving your LELO SURFER™ 2 in direct sunlight and NEVER expose it to extreme heat.

Store your LELO SURFER™ 2 in a dust-free place and keep it away from products of other materials.

The appliances must only be supplied at SELV.

TROUBLESHOOTING

The LED on your LELO SURFER™ 2 does not pulse when the charger is connected:

- The battery is drained and will require several minutes to acknowledge that it is being charged.
- The charger is not properly connected. Check the wall and DC sockets.

Your LELO SURFER™ 2 does not activate when the (()) button is pressed:

- The battery is empty. Recharge your LELO SURFER™ 2.

If you experience any other problems with your LELO SURFER™ 2 or if you have any questions regarding the operation, please contact: customercare@lelo.com

SPECIFICATIONS

Materials: Body safe silicone, ABS Plastic

Finish: Smooth

Size: 103 x 96 x 34 mm / 4 x 3.8 x 1.3 in

Weight: 71 g $\pm 10\%$ / 2.5 oz $\pm 10\%$

Insertable length: 77 mm / 3 in

Battery: 3.7 V lithium battery with 200 mAh

Charging: Up to 2 hours

Rated Power:

- **Input:** 5 V 200 mA 1 W
- **Output:** 3.7 V 110 mA 0.4 W

User time: Up to 2 hours. Every 20 minutes, the device auto shuts down.

Standby: 90 days

Frequency: 130 Hz

Max. noise level: < 63 dB

Interface: 1 button, 1 LED

REGISTER WARRANTY

To activate your 1-year limited warranty, register the number provided on the LELO Authenticity Card at LELO.COM/SUPPORT.

1-YEAR WARRANTY

LELO warrants this pleasure object for a period of ONE (1) YEAR, after the date of original purchase, against defects due to faulty workmanship or materials. The warranty covers working parts that affect the function of the pleasure object. It does NOT cover cosmetic deterioration caused by fair wear and tear or damage caused by accident, misuse, or neglect. Any attempt to open or take apart the pleasure object (or its accessories) will void the warranty. If you discover a defect and notify LELO during the warranty period, LELO will, at its discretion, replace the pleasure object free of charge. Claims under warranty must be supported by reasonable evidence that the date of claim is within the warranty period. To validate your warranty, please keep your original purchase receipt together with these warranty conditions for the duration of the warranty period. To claim your warranty, you must log in to your account at LELO.COM and then select the option to make a warranty claim. Shipping costs are non-refundable. This undertaking is in addition to the consumer's statutory rights and does not affect those rights in any way.

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):

The crossed-out dustbin symbol indicates that this pleasure object should not be treated as household waste, but rather be brought to the appropriate collection point for the recycling of electrical and electronic equipment.



SERIAL NO.



IPX 7



MANUFACTURE DATE



FOLLOW INSTRUCTIONS FOR USE



ETICHETTA AMBIENTALE	
Categoria	Linee guida per la raccolta
SCATOLA COLORATA	RACCOLTA CARTONGINO
SCATOLA DI CARTONE	RACCOLTA CARTONGINO
AVVIO IN ENR	RACCOLTA PLASTICA
AVVIO NON TESSUTO	RACCOLTA PLASTICA
AVVIO IN PPT	RACCOLTA PLASTICA
MANUALE	RACCOLTA CARTA

Hereby, LELOi AB declares that the radio equipment type [Non-Specific Short Range Device] is in compliance with Directive 2014/53/EU. LELOi AB declares that the product is also compliant with Directive 2011/65/EU (RoHS). The full text of the EU declaration of conformity is available at the following internet address : <https://www.lelo.com/regulatory>

DISCLAIMER: Users of this product do so at their own risk. Neither LELO nor its retailers assume any responsibility or liability for the use of this product. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment. The model may be changed for improvements without notice.

© 2026 LELOi AB. All rights reserved.

LELOi AB, Karlavägen 41, 114 31 Stockholm, Sweden.

Distributed in the US by LELO USA Inc., 5799 Fontanoso Way, San Jose, CA 95138, USA.

Distributed in Australia by LELO Oceania 6 Prohasky Street, Port Melbourne, VIC 3207, Australia.

Designed and developed by LELO Sweden.

Made in China.

US and International patents or patent applications apply to this product: visit <https://www.lelo.com/intellectual-property>

www.lelo.com