

BATTERY CARE INSTRUCTIONS

BATTERY CARE INSTRUCTIONS: IF THE BATTERY COMPARTMENT CONTAINS A PROTECTIVE SHEATH PLEASE DO NOT REMOVE.

- Do not mix different types of battery brands, or mix new and used batteries, as this may affect the performance of your toy.
- Only use the recommended type of batteries, as stated on the package.
- Batteries must be inserted with the correct polarity (+/-).
- Only operate when fully assembled in accordance with instructions (See diagram).
- The supply terminals should not be short circuited i.e. do not bridge terminals with metallic material.
- Take care when cleaning your toy remembering it is an electrical item and moisture can damage your toy and also react with the batteries.
- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- To maintain battery life remove batteries after each use and before cleaning, this will help to keep your toy in optimum condition.

- Exhausted batteries should be removed from the product and recycled in accordance with manufacturers recommendations.
- Store your vibrator in a clean dry environment as moisture can damage the batteries and the motor.
- Take care when using oils and lubricants that they do not enter the battery compartment as they can react with the batteries.

WHEN ALL ELSE FAILS, CHECK YOUR BATTERIES, THEY ARE USUALLY THE PROBLEM. RENEW YOUR BATTERIES TO RETURN YOUR VIBRATOR TO OPTIMUM PERFORMANCE.



- Remove battery isolator disc before use.
- Press button to turn on/change function.
- Hold button for 3 seconds to turn off.

VIBRATOR CARE INSTRUCTIONS

Take care when using the vibrator for the first time, vibration can be intense.

1. Clean your vibrator after every use
2. Take care when cleaning your vibrator. Remember it is an electrical item, moisture can damage the product and also react with the batteries
3. Always remove the batteries before cleaning and after using your vibrator in order to keep it in optimum condition
4. Keep your vibrator clean and dry, store in a dry place, moisture can damage batteries and motor
5. Always store your vibrator separately, different materials have different chemical configurations and may react with each other
6. Always allow your vibrator to cool down before storing in a safe place, vibrators are electrical and motors get warm with use
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to over heat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing to use
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries

WEEE:

This product is classified as Electrical and Electronic Equipment. Should the time come for you to dispose of this product, please ensure that you do so in accordance with the European Waste of Electrical and Electronic Equipment (WEEE) Directive and compliance with local laws relating to this directive.



Cartone di fibra non ondulato.
Controlla le linee guida del tuo comune.
Please keep packaging for future reference

WARNING

- To avoid injury or aggravation of pre-existing conditions, this device should not be used on swollen calves or unexplained calf pain.
- If you are unsure or pregnant - please consult a doctor before use.
- By following these simple guidelines we are sure your new sex toy will give you great pleasure many times.
- Please retain all packaging since it contains important information.
- **THIS IS NOT A CHILDREN'S TOY - ADULT USE ONLY.**
- Not for use by persons under the age of 18.

Sold as a novelty only, no medical claims are warranted or implied with the use of this product. Warning for vibrating products: To avoid injury or aggravation of pre-existing conditions, this product should not be used on swollen or inflamed areas or skin lacerations.

This product is guaranteed for 12 months from date and proof of purchase. For use in water up to 1 meter depth for up to 30 mins. Caution: If the product is used in close contact with high power water jets (such as a jacuzzi) or has been left fully submerged for an extended period, it may extensively damage or effect the enjoyment and longevity of the product.

